
Vogel Manufacturing 1611 W. Wernsing Effingham, IL 62401 217.342.6949

Mini Spline Drive Clutch Assembly Schematics

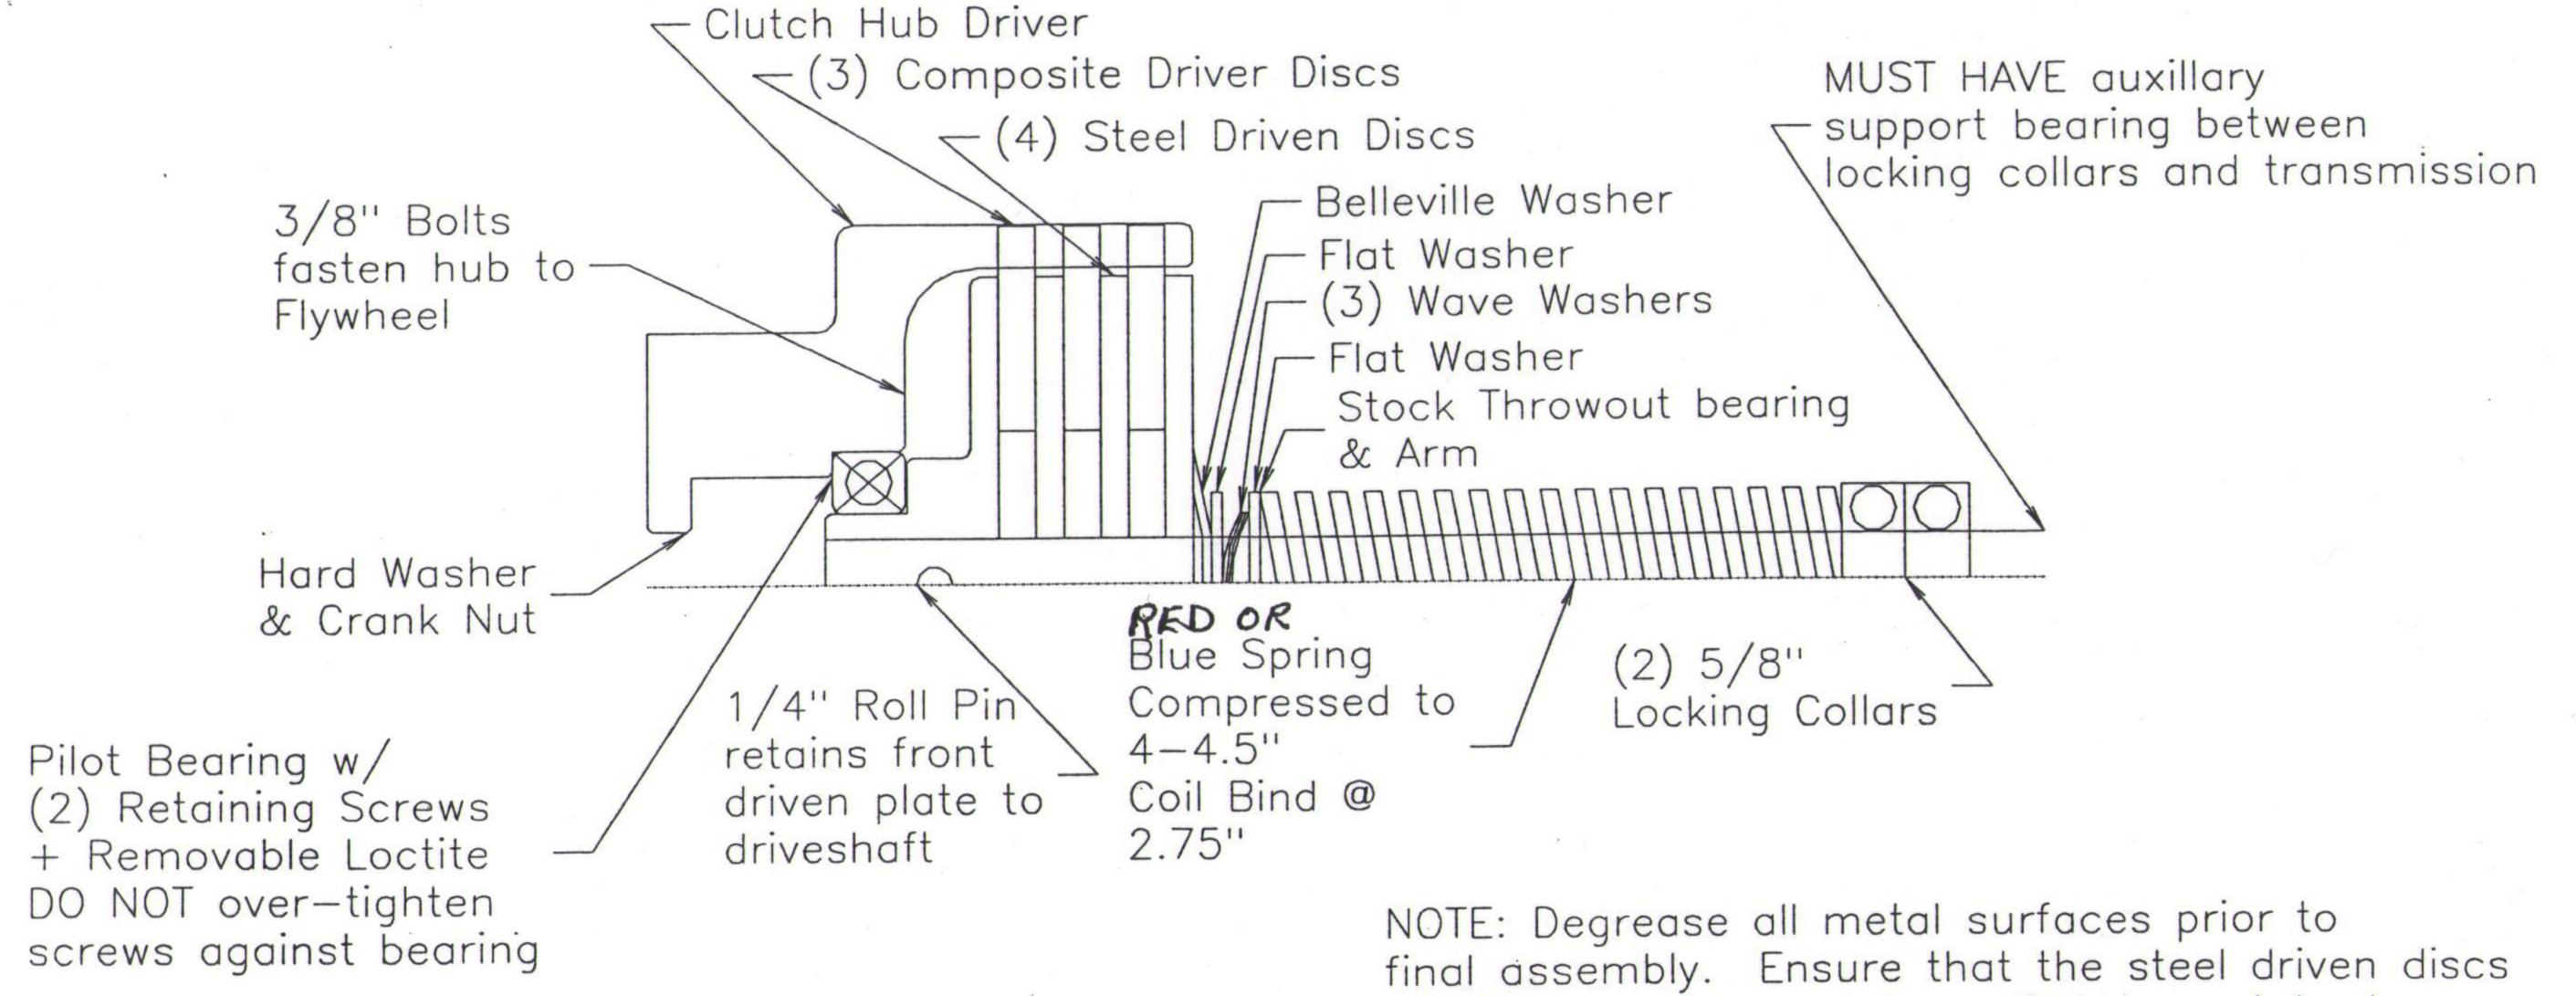

interlock smooth and free. Deburr metal edges if necessary.

Wideframe CubCadet installation may require an additional 0.25" spacer between final Flat washer and your stock throwout bearing and arm.